 
 


Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.

SETTING & USAGE



 
Memory position

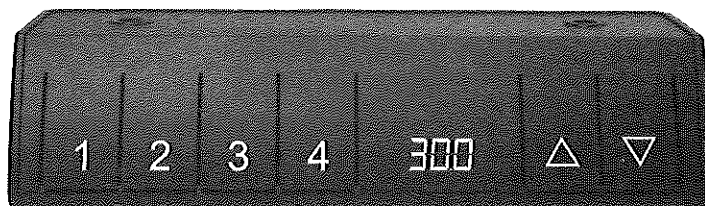

Raise/up Lower/down

Notice

While raising or lowering the table, please make sure objects are secure on the table, and nothing prevents the table from raising or lowering through its desired range of adjustment.



Height Adjustment

Press up ▲ or down ▼ to raise or lower the table to the preferred table height.



Memory Preset

Press and hold key (1, 2, 3, 4) for 2 seconds, then you can set the height to the preferred height for seated or standing work.



Use of Memory Key

Briefly press key (1, 2, 3, 4), the desk will move to the preferred memorized working height.

▲ Table adjustment stops by pressing any key on the Control pad.

▲ ATTENTION ▲

Do not tighten any screws or bolts until the unit is completely assembled.
Ensure all bolts and screws are tightened before using, check bolts and screws every 6 months.
If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts.
Failure to follow these warnings may result in injury.

Before assembly, please remove all parts from the carton, verifying that you have the correct quantities, and read all the instructions.



Press for 3 seconds

Reset

Press the ▼ key for 3 seconds, the table moves all the way down and the display will show rES. The desk will raise to a preset height when the reset is completed.

⚠ During the reset, pressing any key will terminate the reset. The reset operation needs to be restarted.



Child Lock Function

Function

After switching on, this button no longer responds to any button presses.

Operation

To turn on the child lock: hold both keys ▲ ▼ for 3 seconds at the same time, the child lock is activated when "LoC" is displayed on the screen. NOTE: Once the child lock is activated the display keys won't respond to any key presses.

Turn off the child lock: hold both keys ▲ ▼ for 5 seconds at the same time, the child lock is turned off when you see the real-time height on the display.

⚠ ATTENTION ⚠

Do not tighten any screws or bolts until the unit is completely assembled.

Ensure all bolts and screws are tightened before using, check bolts and screws every 6 months.

If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.