

ASSEMBLY INSTRUCTIONS


Remove all items from the carton. Verify all pieces before assembly.


PARTS LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	8	1	Seat	14	1	Back Tight Bolt
2	1	Base	9	1	Mechanism	15	1	Back Post Bellow
3	1	Seat Post	10	6	Mechanism Screw	16	2	Back Post Bellow Screw
4	1	Seat Post Cover	11	2	Arm Bracket	17	1	M5 Size Allen Wrench
5	1	Backrest	12	2	Armrest	18	1	M6 Size Allen Wrench
6	1	Backrest Post	13	1	Arm Width Adjustment			
7	1	Backrest Post Screw	13	1	Knob + Washers			

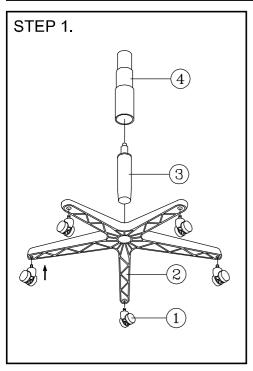


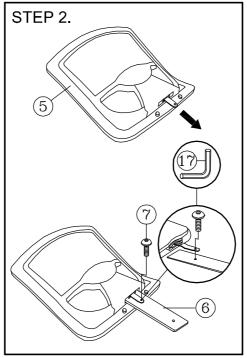

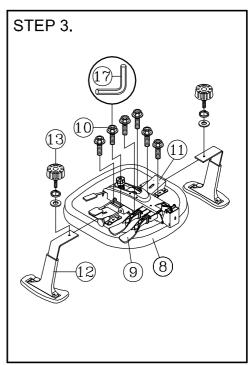

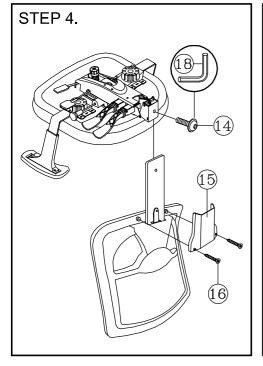



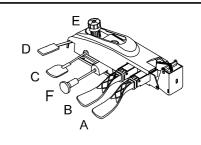

- (A) Back angle adjustment lever.
- (B) Combination seat / back angle adjustment lever with infinite lock.
- (C) Seat height adjustment leve.
- (D) Forward tilt lever-*Lift lever B to activate the forward tilt. *Pull lever D backward to allow you to lean to a forward position and push lever B downward to lock position once the desired angle is reached.
- (E) Tension control knob-Turn colockwise to increase tension and counterclockwise to decrease tension.
- (F) Sliding seat: Seat depth adjusts for different user leg lengths.

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER. DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT. DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES. DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS
- ARE TIGHTENED.

 EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS. DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY, DO NOT USE PLASTIC BAG AS HEAD COVERING IT MAY CAUSE SUFFOCATION. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE:SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.