




 













ASSEMBLY INSTRUCTIONS  
MODEL: PL113GG-A1



Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.


IN THE CARTON:

HARDWARE

1  Cam Lock 8 Pcs	2  Klix Cam 8 Pcs	3  Housing Cap (Long) 8 Pcs	4  Metal Scallop Shape Handle 2 Sets	5  Softclosing Door Hinges 2 Pairs	6  Drawer Lock 1 Pc	7  Door Stopper 1 Pc	8  833 L-Bracket 1 Pc	9  Screw #3.5 x 12mm 2 Pcs
10  Screw #3.5 x 20mm 4 Pcs	11  Screw #3.5 x 16mm 1 Pc	12  Adjustable Glide 4 Pcs	13  6 Hole L-Bracket 3 Pcs	14  Iron Shelf Support 4 Pcs	15  Screw #6 x 5/8" 18 Pcs	16  JCBC Screw M6 x 40mm = 4pcs Washer = 8pcs	17  M4 x 65 Allen-Key 1 Pc	

COMPONENTS


A  Top Panel	B  Bottom Panel	C  Adjustable Shelf	D  Back Panel	E  Front Rail	F  Side Panel x 2	G  Door x 2	H  Hanging Panel x 2
--------------------	-----------------------	---------------------------	---------------------	---------------------	-------------------------	-------------------	----------------------------

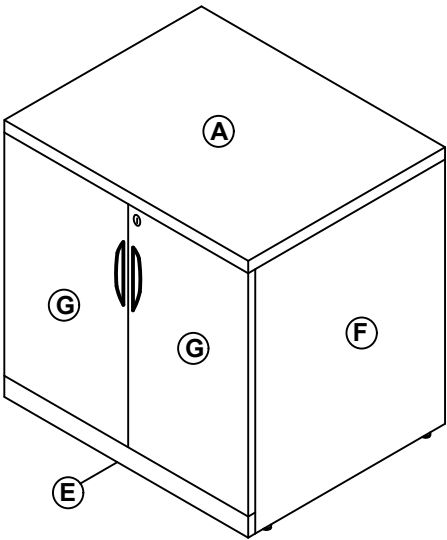

KLIX CAM INSTRUCTIONS


1  Line up Cam Lock, turn clockwise.	2  Insert the cam with the arrow pointing towards the hole in the edge.	3  Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.
---	---	---

HINGES INSTRUCTIONS

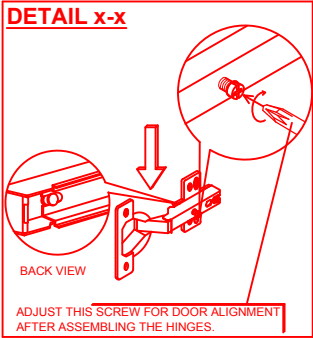


## INSTRUCTIONS:

1

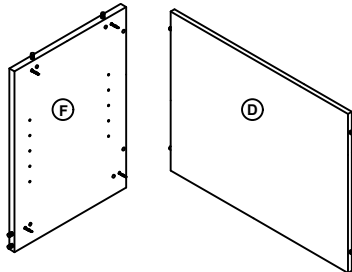


Attach Side Panel (F) to  
Back Panel (D).

2

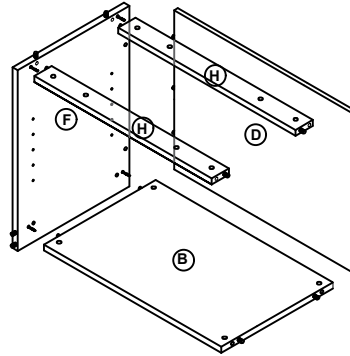


Attach the Bottom Panel (B) and  
Hanging Panel (H) to Side Panel (F) by  
using Cam Lock (1) and Klix Cam (2).

3

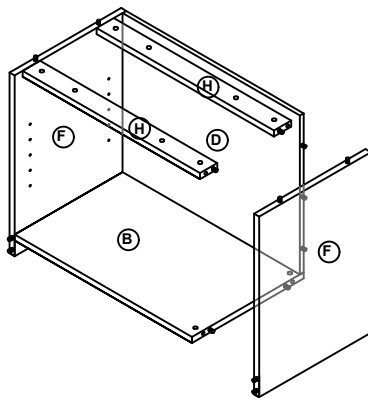

Attach the Hanging Panel(H) and  
another Side Panel(F) by using Cam  
Lock(1) and Klix Cam(2).

4

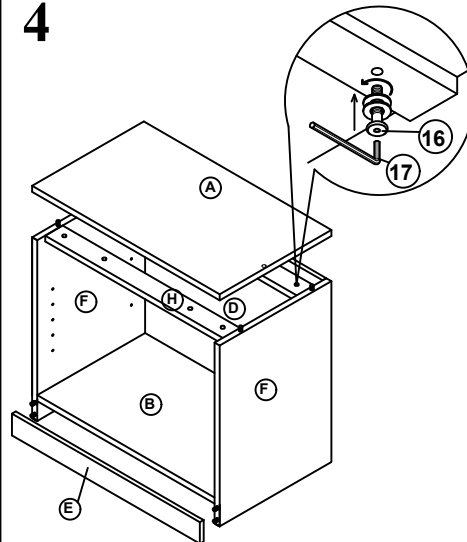

Attach the Top Panel (A) on top Side  
Panel (F), Back Panel (D) and  
Hanging Panel (H) by using JCBC  
Screw and Washer (16).


Attach the Front Rail (E) and Side  
Panel (F) by using wood dowel.

### ⚠ ATTENTION ⚠

Place all wooden parts on a clean, smooth surface to prevent them from being scratched.

Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples and packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.


## INSTRUCTIONS:

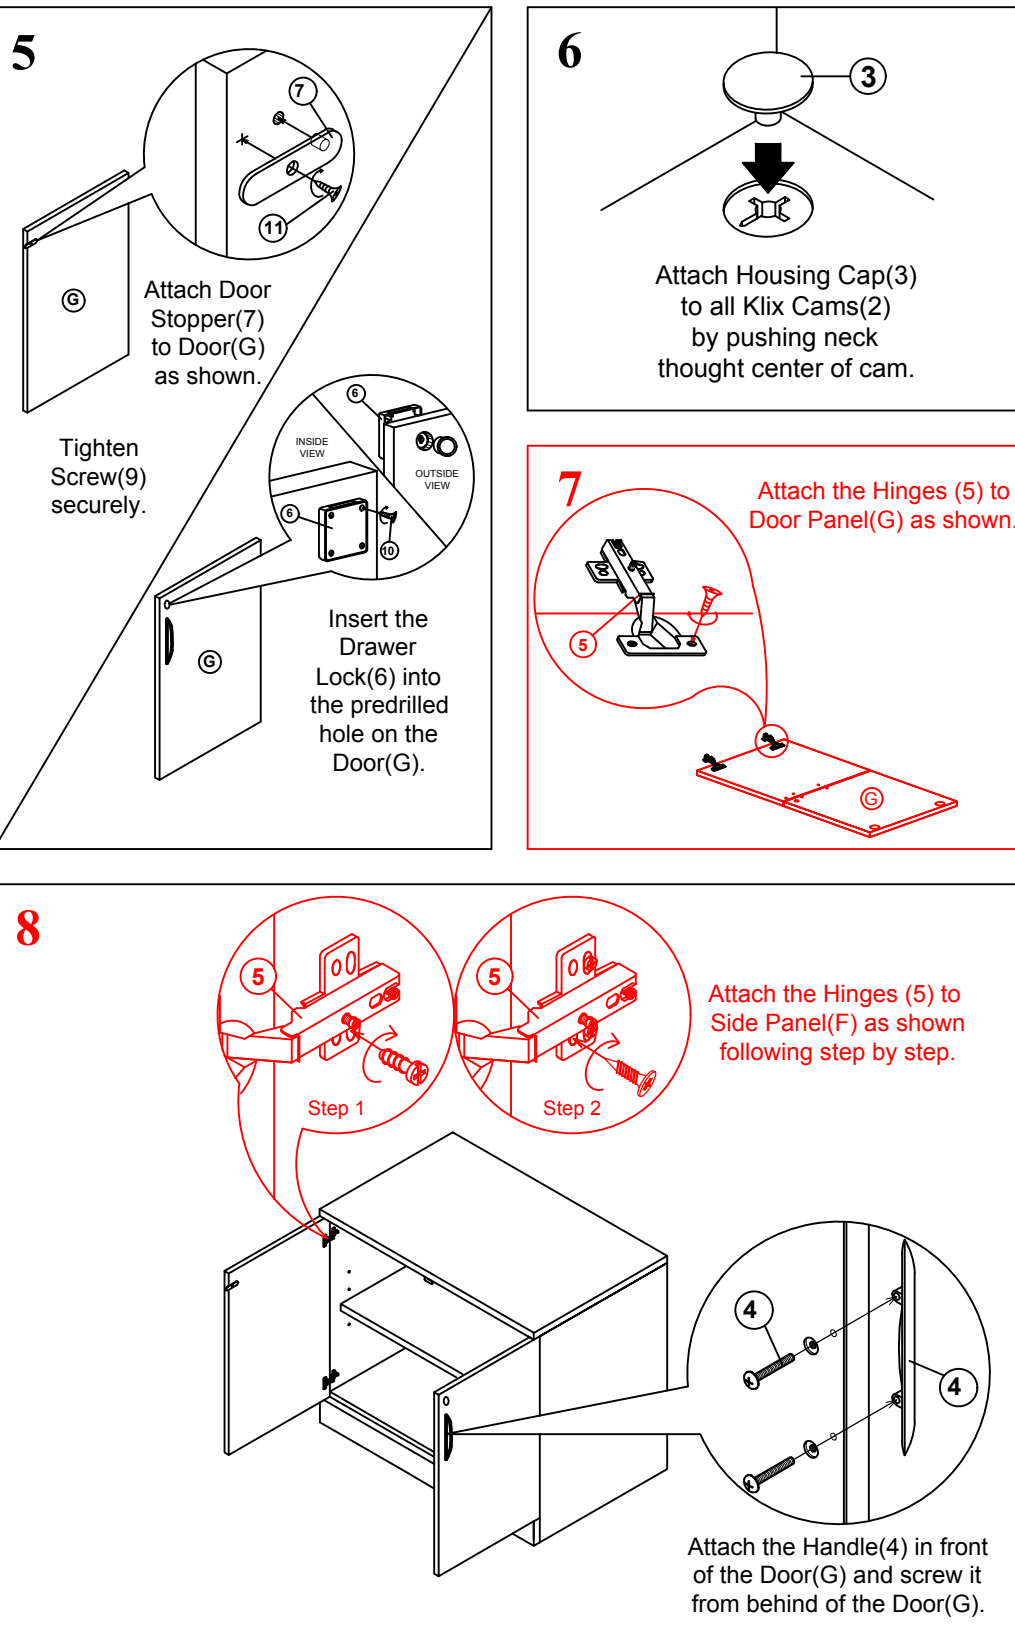

## INSTRUCTIONS:

**9**

Insert Shelf Support Pins(14) into the pre drilled holes and place Adjustable Shelf(C) at convenient distances.

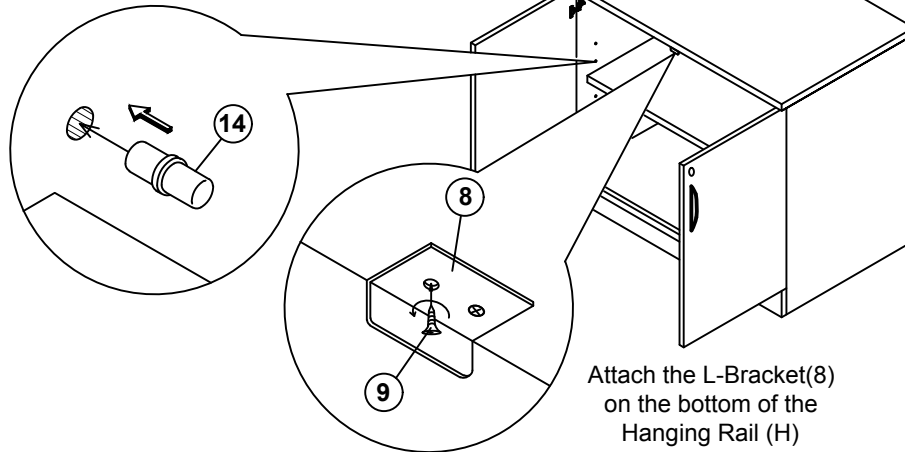

**10**

Attach the L-Bracket(13) on the Front Rail(E) and SIDE Panel(F).

Attach the L-Bracket(13) on the Front Rail(E) and Bottom Panel(B).

