



HL17U Programable Remote

For use with PLTEAB4872E3S2MWF24 and PLTECAB6078E3S3MLWF table bases

Initialization / Reset

- Press and hold **▲** and **▼** for 3 seconds, the desk moves down while the control reads **5E7** or *Error Code*.
- Keep pressing the buttons until the desk reaches the lowest height then bounces back about 5mm, the control box beeps, and the height figure is shown on the control. The initialization/reset is complete.

Height Adjustment

Keep pressing **▲**/**▼**, the desk starts moving up / down. When the desk reaches the desired height, release **▲**/**▼**, the desk stops moving, and the control shows the height.

Memory Position

1. Set memory position 1:
Adjust the desk to the desired height then press **1** and **S** and hold for 3 seconds, the height figure flashes for 3 seconds. Memory position 1 is set.
2. Recall memory position 1:
Change memory position recall mode: Press and hold **▲** and **2** for 3 seconds, the control shows **All** (Constant Touch) / **All** (One Touch).
 - (1) "**All** / Constant Touch": Press and hold on **1**, the desk moves to the preset memory position 1.
 - (2) "**All** / One Touch": Click **1**, the desk moves to the preset memory position 1.
 - Set memory position 2: Refer to 2.1 (Buttons: **2 S**)
 - Recall memory position 2: Refer to 2.2 (Buttons: **2**)
 - Set memory position 3: Refer to 2.1 (Buttons: **3 S**)
 - Recall memory position 3: Refer to 2.2 (Buttons: **3**)
 - Set memory position 4: Refer to 2.1 (Buttons: **4 S**)
 - Recall memory position 4: Refer to 2.2 (Buttons: **4**)

Upper / Lower Limit Setting

(After setting, the desk can only move between the upper and lower limit)

1. Set upper limit:
Adjust the desk to the desired height, keep pressing **▲** and **S** for 3 seconds, the control shows **HL5**, the upper limit is set.
2. Set lower limit:
Adjust the desk to the desired height, keep pressing **▼** and **S** for 3 seconds, the control shows **LL5**, the lower limit is set.
3. Remove Upper / Lower limit:
Keep pressing **▲**, **▼** and **S** for 3 seconds, the control shows **LL-**

Height Unit

The height unit could show in centimeters or inches. Press and hold **2** **3** for 3 seconds, the display shows **A21** (centimeters) or **A22** (inches).

Anti-collision Sensitivity

Keep pressing **▲** **1** for 3 seconds, the control shows **A01** / **A02** / **A03**. Repeat the operation, the sensitivity toggles between **A01** (High Sensitivity), **A02** (Medium Sensitivity) and **A03** (Low Sensitivity).

Starting Height Calibration

- a. Adjust the desk to the lowest height;
- b. Press and hold **▼** for 10 seconds until the height figure starts flashing;
- c. Use **▲** or **▼** adjust the height figure by 0.1 inch at a time;
- d. Adjust to your desired value;
- e. Keep pressing **▼** for 5 seconds to save the setting.

Lock

1. To lock; keep pressing **S** for 5 seconds, the display shows **L01**, the control is locked.
2. To unlock; keep pressing **S** for 5 seconds, the display changes from **L01** to current height figure.

After RESET, all above settings will be restored to factory settings except the MEMORY POSITION.

Trouble Shooting

E01: Lifting columns height difference protection; reset the system.

E02: Continuous operation for more than 4 minutes; stop the desk for 20 minutes

E03: Power failure during operation, restore power and reset.