



Follow this diagram to adjust your cabinet and hutch doors.

Note: Over time, your doors may shift or sag. This does not mean that the hinges have worn out - they simply need adjusting.

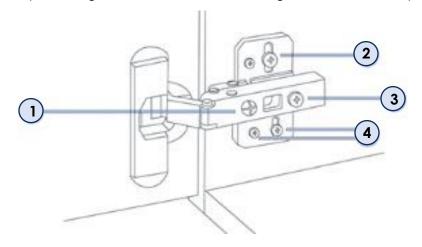


- Sideways / Tilt adjustment
  Turn the screw:
  - **U Clockwise** to move the door further away from the side of the cabinet.
  - **The Anti-clockwise** to move the door closer to the side of the cabinet.

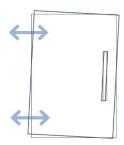

- Height Adjustment
  While supporting the weight of the door, turn the screws:
  - U Clockwise to move the door up.



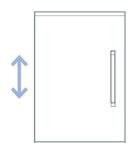

- 3 Forward and back adjustment
  If the gap between the back of the door and the cabinet is too small, the
  door may not close fully. Turn the screw:
  - **U Clockwise** to decrease the gap between the door and the cabinet.
  - **The Anti-clockwise** to increase the gap between the door and the cabinet.

