


## PLT-24xx

### Pre-drilled PLT top inserts

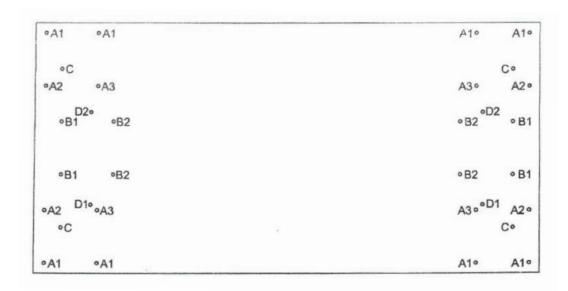

BASE TYPE	MODEL NUMBER	CORRESPONDING INSERTS
Post Leg	PLTPOSTLEG	A1, A2, A3
T-Leg	PLTTLEG	B1, B2
Ganging Hardware	PLT-GC	С
Collaborator Flip Top Nesting Table	PFT-48- PFT-60, PFT-72	D1, D2
Breakout Flip Top Nesting Table	PTLF-48. PTLF-60, PTLF-72	B2
Pneumatic Height Adjustable Table	PTLT-PGLB60NF	A2
Electric Height Adjustable Table	PLT-EAB4872BUDNF	A2
Corner Electric Height Adjustable Table	PLT-EACB6078WFER	A2 or A3

### **IMPORTANT**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staple and packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach children.



# PLT-30xx

## Pre-drilled PLT top inserts

•A1	°A1	A1°	A10
°C			Co
°A2	•A3	А3 •	A2°
∘B1	°B2	∘B2	∘ B1
-54	-00		
∘B1	•B2	•B2	• B1
°A2 °C	•A3	A3 °	A2°
1	-04	9	
•A1	°A1	A1°	A19

BASE TYPE	MODEL NUMBER	CORRESPONDING INSERTS
Post Leg	PLTPOSTLEG	A1, A2, A3
T-Leg	PLTTLEG	B1, B2
Ganging Hardware	PLT-GC	С
Breakout Flip Top Nesting Table	PTLF-48. PTLF-60, PTLF-72	B2
Pneumatic Height Adjustable Table	PTLT-PGLB60NF	A2
Electric Height Adjustable Table	PLT-EAB4872BUDNF	A2
Corner Electric Height Adjustable Table	PLT-EACB6078WFER	A2 or A3

### **IMPORTANT**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staple and packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach children.