






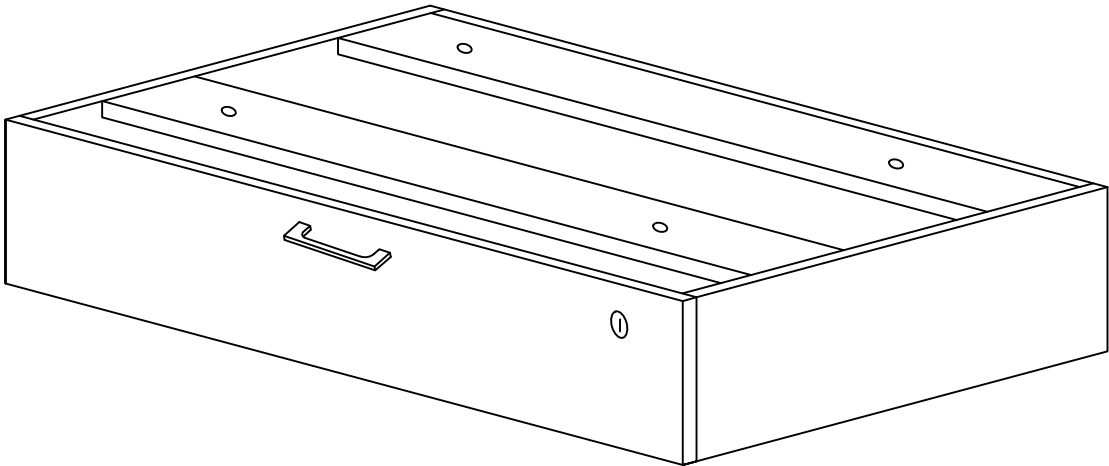
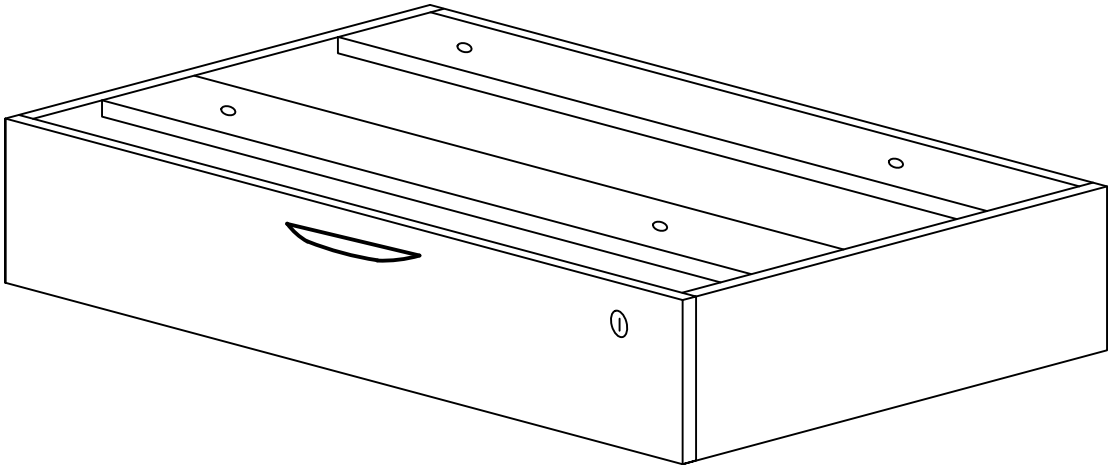


MODEL: PL272

Before assembly, please remove all parts from carton, verifying that you have the correct quantities, and read all the instructions.


IN THE CARTON:

1	 METAL SCALLOP SHAPE HANDLE 1 SET	 METAL HANDLE 1 SET FOR SLB COLOR	2	 JCBC SCREW M6 x 40MM = 4PCS WASHER = 4PCS	3	 M4 x 65 ALLEN-KEY 1 Pc	4	 L-BRACKET 1 Pc	5	 SCREW #3.5 x 12MM 2 PCS
6	 KEYS 1 SET									




# MODEL: PL272

## INSTRUCTION:

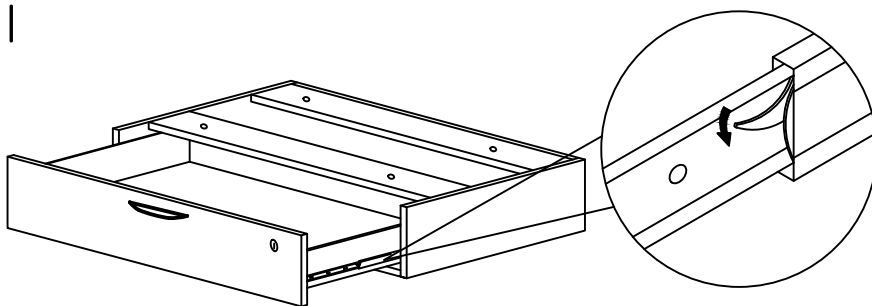


1  
REMOVE DRAWER FROM MODULAR BUFFET. FULLY OPEN DRAWER. WHERE FIRST SLIDE MEETS SECOND SLIDE THERE IS A SMALL CLIP. PULL THE CLIP ON THE LEFT HAND SLIDE UP, PUSH THE CLIP ON THE RIGHT HAND SLIDE DOWN. PULL DRAWER OUT.


2 MODULAR BUFFET CASE TO UNDERSIDE OF WORKSURFACE BY USING JCBC SCREW (2)

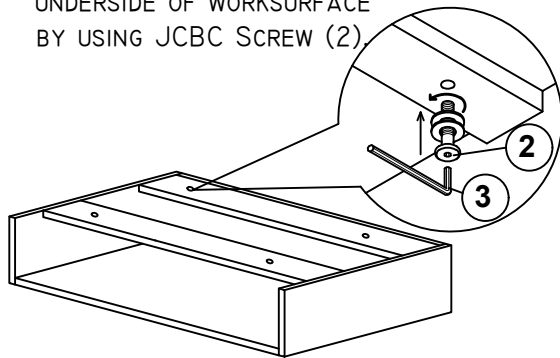

3 ATTACH THE L-BRACKET(4) ON THE BOTTOM OF THE TOP PANEL.

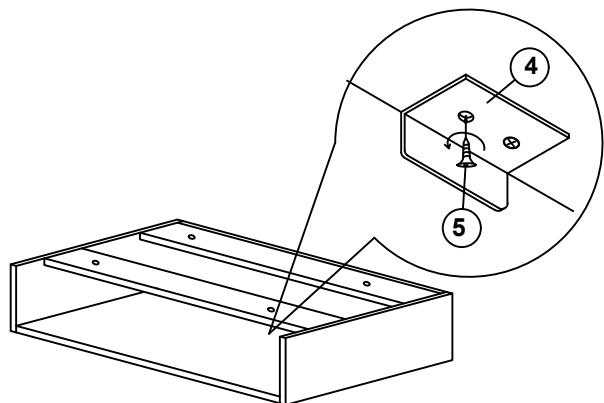

4

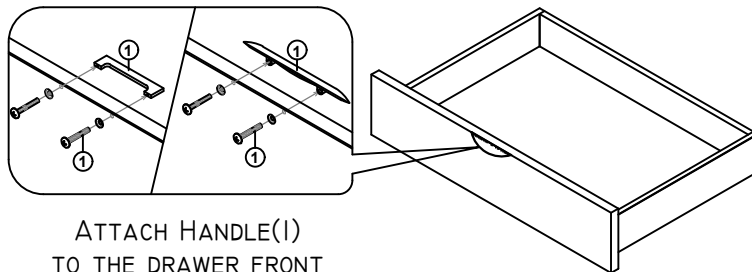

ATTACH HANDLE(1)  
TO THE DRAWER FRONT  
AND SCREW IT FROM  
BEHIND DRAWER FRONT.

### ⚠ ATTENTION ⚠

Place all wooden parts on a clean, smooth surface to prevent them from being scratched.

Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples and packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. If any parts are missing, broken, damaged or worn, stop use of product until repairs have been made using factory authorized parts. Failure to follow these warnings may result in injury.