

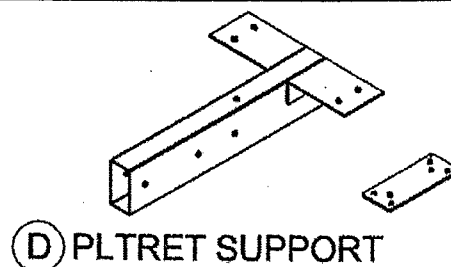
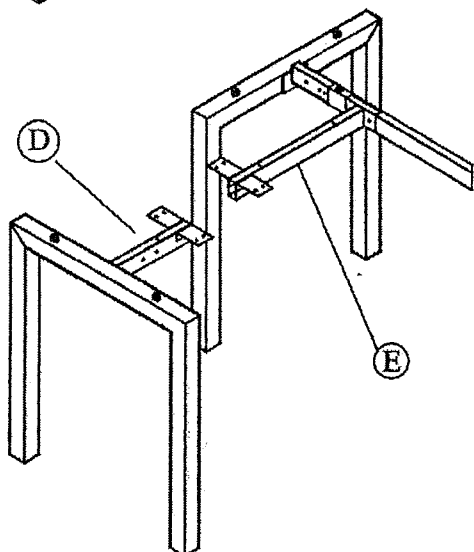


**PLTRET SUPPORT**  
**PLT - U - SUPPORT**

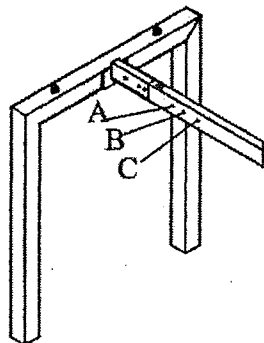



**(D) PLTRET SUPPORT**  
**PART LIST**

|   |  |                       |       |
|---|--|-----------------------|-------|
| 1 |  | Wood Screw<br>x 20 mm | 5 pcs |
| 2 |  | Bolts<br>M6 x 12mm    | 3 pcs |
| 3 |  | Flat Bracket          | 3 pcs |

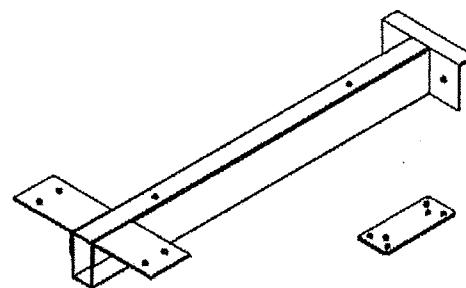

**(E) PLT - U - SUPPORT**  
**PART LIST**

|   |  |                       |        |
|---|--|-----------------------|--------|
| 1 |  | Wood Screw<br>x 20 mm | 12 pcs |
| 2 |  | Bolts<br>M6 x 12mm    | 8 pcs  |
| 3 |  | Flat Bracket          | 4 pcs  |

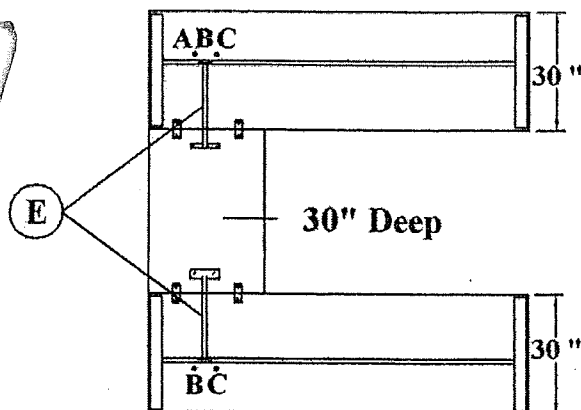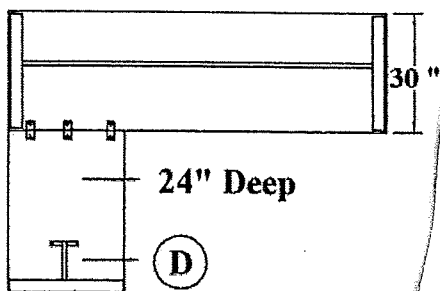

# Always use holes AB when return is 24" Deep .  
# Always use holes BC when return is 30" Deep .